

Printer Protocol Interpreter IEGL™

*Programmer's Reference Manual for IEGL,
a IER Siège® Printer Protocol Interpreter*

Thermal Series Printers

***Printer Protocol Interpreter IEGL
Programmer's Reference Manual for IEGL,
an IER Siège Printer Protocol Interpreter***

Thermal Series Printers

Trademark Acknowledgments

IER is a registered trademark of IER Siège

SL4M, T4M, SL5000r, T5000r, and SL/T5R Energy Star are trademarks of
Printronix, Inc.

Printronix and PSA are registered trademarks of Printronix, Inc.

COPYRIGHT 2008, 2010 PRINTRONIX, INC.
All rights reserved.



Table of Contents

| | | |
|----------|---|-----------|
| 1 | Introduction | 7 |
| | About This Manual..... | 7 |
| | IEGL SETUP Menu..... | 7 |
| | IEGL SETUP Submenus..... | 8 |
| | Active | 8 |
| | Character Set..... | 8 |
| | Euro Symbol | 8 |
| | Frame Start Char | 8 |
| | Frame End Char | 8 |
| | Templ. Location | 8 |
| | Save Templates..... | 8 |
| | Labelsize Cmd | 9 |
| | Media Setup Cmd | 9 |
| | Heat Setup Cmd | 9 |
| | Data Protocol | 9 |
| | Vert. DPI Adjust | 9 |
| 2 | Supported Commands | 11 |
| | Label Programming Commands..... | 11 |
| | Data Compression | 12 |
| | Configuration Commands..... | 13 |
| | Fonts And Character Set Commands..... | 15 |
| | Ignored Configurations And Information Request Commands | 16 |
| | Command Descriptions | 16 |
| | Print Area..... | 16 |
| | Unit Selection..... | 17 |
| | Text Fields | 17 |
| | Resident Fonts..... | 17 |
| | Downloaded Fonts..... | 18 |
| | Character Sets..... | 18 |
| | Barcode Fields..... | 18 |
| | Barcode Positioning..... | 19 |
| | Logos | 19 |
| | Graphics | 20 |
| | Cutter Commands..... | 20 |

| | |
|---|-----------|
| 3 Configuration Compatibility | 21 |
| Error Reporting | 22 |
| Templates | 23 |
| Constraints..... | 23 |
| Non-Volatile Page Memory | 23 |
| Load Template at Power Up | 23 |
| Changing Frame Start and End Characters | 23 |
| A Character Sets | 25 |
| PC850 Character Set | 25 |
| Apple Character Set..... | 26 |
| Latin 1 Character Set | 26 |
| Roman 8 Character Set | 27 |
| B Contact Information | 29 |
| Printronic Customer Support Center..... | 29 |
| Printronic Supplies Department | 29 |
| Corporate Offices..... | 30 |


1

Introduction

About This Manual

This manual explains the differences between Printer Protocol Interpreter IER Siège® Graphic Language (IEGL) Utility and the IER printer language. If you have a SL5000r/T5000r printer use this manual with your *SL5000r™/T5000r™ User's Manual* for complete printer-protocol operation. If you have a SL4M™/T4M™ printer use this manual with your *SL4M/T4M User's Manual*.

IEGL SETUP Menu

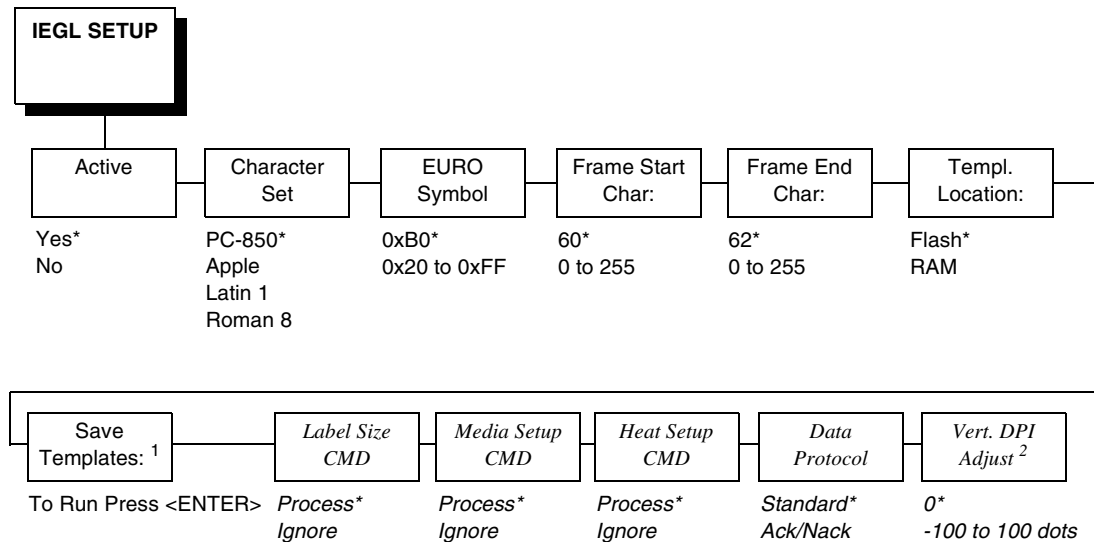

Notes:

* = Default

For SL5000r/T5000r printers, *italicized* items are available only when you enable Admin User in the PRINTER CONTROL menu.

For SL4M/T4M printers, the IEGL Setup menu is available only when you enable Admin User in the PRINTER SETUP menu.

¹ This menu is only present when the 'Templ. Location' menu has been set to RAM.

² Available for SL4M/T4M printers only.

IEGL SETUP Submenus

Active

Indicates if the IEGL parser should process all incoming data, or that all data should be passed to the bottom emulation.

- **Yes** (default). IEGL is active, process IEGL commands.
- **No**. IEGL is inactive, data is processed by LP+.

Character Set

Allows you to select the character set. See Appendix A on page 25 for supported character sets.

Euro Symbol

Allows the operator to select the hexadecimal position of the Euro (€) symbol in the code page.

Frame Start Char

Allows you to select the decimal code for the frame start character. The default value is 60, which is code for the '<' character.

NOTE: This value can also be changed through the <+ENT...> command. In both cases, the value is only preserved during power down after the configuration is saved manually.

Frame End Char

Allows you to select the decimal code for the frame end character. The default value is 62, which is code for the '>' character.

NOTE: This value can also be changed through the <+ENT...> command. In both cases, the value is only preserved during power down after the configuration has been saved manually.

Templ. Location

Allows you to select the location to which templates are saved. By default, templates are saved to flash memory. For applications that send templates repeatedly, the set RAM must be used to prevent flash file system overflows.

NOTE: Overwritten files are not deleted from the file system until optimize and reboot is performed.

If 'RAM' is selected, the templates will be lost when the printer is powered off. You have the option to manually move the templates in RAM to flash by using the 'Save Templates' menu.

Save Templates

Allows you to move the templates in RAM to flash memory. The menu is only present when 'RAM' is selected in the 'Templ. Location' menu. If no templates are saved and this menu is executed, the message 'Nothing to save Send Templ. First' will display on the printer front panel.

Labelsize Cmd

Allows you to disable the set label size command.

- **Process** (default). The <+DL> command overrides the panel setting.
- **Ignore**. The value set in the front panel configuration is used, and the <+DL> command is ignored.

Media Setup Cmd

Allows you to disable the media handling command.

- **Process** (default). The <+CF> command overrides the panel setting.
- **Ignore**. The media handling as set in the front panel configuration is used and the <+CF> command is ignored.

Heat Setup Cmd

Allows you to disable the set heat command.

- **Process** (default). The <+C> command overrides the panel setting. The <+C> command range, 0 to 9, is mapped to the Printronix range, -15 to 15. For example, sending a value of 8 results in setting the intensity to +12.
- **Ignore**. The value set in the front panel configuration is used, and the <+C> command is ignored.

Data Protocol

Defines if the IER Ack/Nack communication protocol must be used.

- **Standard** (default). IER ACK/NACK protocol disabled. The communication protocol as defined in the interface setup menu is used.
- **Ack/Nack**. IER Ack/Nack protocol enabled. IEGL acknowledges each received command with Ack. A Nack is sent in case of an error.

Vert. DPI Adjust

NOTE: Applies to SL4M/T4M printers only.

This option adjusts the resolution used to scale the page elements/coordinates. If the printed label length is incorrect, the vertical resolution value can be fine adjusted between -100 to +100. Negative values result in a lower DPI value and therefore a longer label. Positive values result in a higher DPI value and therefore a shorter label. The default value is 0 and the range is from -100 to 100.

NOTE: This adjustment does not affect the image size and downloaded bitmap fonts.

2

Supported Commands

Label Programming Commands

| Command | Command Description | Support | Reference |
|----------------|----------------------------------|----------------|---|
| <I...> | Print Page | Full | |
| <F> | Erase Page Bitmap | Full | |
| <L...> | Print Line | Full | |
| <C...> | Print Box | Full | |
| <D...> | Print Oblique Line | Full | |
| <T...> | Print Text Direct | Full | |
| <B...> | Print Barcode Direct | Full | |
| <PDF...> | Print PDF417 Barcode Direct | Full | |
| <CD...> | Define Initial Counter Value | Full | |
| <CF...> | Delete Counter | Full | |
| <CI...> | Increment Counter After Printing | Full | |
| <CT...> | Create Text Counter | Full | |
| <CB...> | Create Barcode Counter | Full | |
| <ML...> | Request Template Status | Ignored | See “Ignored Configurations And Information Request Commands” on page 16. |
| <MR...> | Erase Template | Full | |
| <MI...> | Start Template Create Mode | Full | |
| <MF...> | End Template Create Mode | Full | |
| <MT...> | Text Variable Create | Full | |

| Command | Command Description | Support | Reference |
|-----------|---|---------|---|
| <MB...> | Barcode Variable Create | Full | |
| <MPDF...> | PDF417 Barcode Variable Create | Full | |
| <MD...> | Graphics Variable Create | Full | |
| <MC...> | Activate Template | Full | |
| <MA...> | Automatically Activate Template at Power-Up | Ignored | See “Ignored Configurations And Information Request Commands” on page 16. |
| <MV...> | Download Variable Data | Full | |
| <LG...> | Download PRV or HEX logo | Partial | See “Data Compression” on page 12. |
| <G...> | Print Logo Direct | Full | |
| <LPCX...> | Download PCX Logo | Full | |
| <GPCX...> | Print PCX Logo Direct | Full | |
| <LL...> | Send List of Stored Logo Names to Host | Ignored | See “Ignored Configurations And Information Request Commands” on page 16. |
| <LR...> | Clear Indicated Logo (or all when num is 0) | Full | |
| <LC...> | Activate Logo | Full | |

Data Compression

The data compression mode for the the <LG...> command (bit b1 of the transmission mode byte set to 1) is not supported on IEGL.

Configuration Commands

| Command | Command Description | Support | Reference |
|-------------|--|---------|---|
| <A...> | Print Test Pages | Ignored | See "Ignored Configurations And Information Request Commands" on page 16. |
| <!V> | Request Configuration | Ignored | |
| <!L> | Request Sensor Status | Ignored | |
| <E> | Status Request | Ignored | |
| <+SERIE...> | Program Printer Serial Number | Ignored | |
| <%SERIE...> | Request Printer Serial Number | Ignored | |
| <V> | Request Printer Program Version Number | Ignored | |
| <!R> | Program Printhead Resistance | Ignored | |
| <!NL> | Query Print Counter | Ignored | |
| <!NI> | Reset the Print Counter | Ignored | |
| <+TT...> | Select Print Technology <Direct/Transfer> | Ignored | |
| <R> | Reset | Ignored | |
| <RCOLD> | Reboot | Ignored | |
| <CM> | Cut Once | Full | |
| <+U> | Unit Selection (dot or 1/10 mm) | Full | |
| <+CBR...> | Configure Memory Space | Ignored | See "Ignored Configurations And Information Request Commands" on page 16. |
| <LM> | Request Available Ram Disk Space | Ignored | |
| <+CF...> | Configure Media Handling Option | Full | See "Media Setup Cmd" on page 9 and "Cutter Commands" on page 20. |

| Command | Command Description | Support | Reference |
|-----------|---|---------|---|
| <+D...> | Configure Sensor (gap, mark) | Ignored | See “Ignored Configurations And Information Request Commands” on page 16. |
| <+DL...> | Set Label Size | Full | |
| <+O...> | Configure Synchronisation Shift | Ignored | See “Ignored Configurations And Information Request Commands” on page 16. |
| <+OP...> | Vertical Image Shift | Ignored | |
| <+OX...> | Horizontal Image Shift | Ignored | |
| <LA...> | Language Selection for Config Print | Ignored | |
| <+DS...> | Eject Blank Document at Power Up | Ignored | |
| <S...> | Feed Command for Number of Labels Specified | Full | |
| <+TC...> | Heat Table Selection | Ignored | See “Ignored Configurations And Information Request Commands” on page 16. |
| <+C...> | Intensity Setting | Full | |
| <+L...> | Adjust Sensor Treshold Value | Ignored | See “Ignored Configurations And Information Request Commands” on page 16. |
| <+ENT...> | Select Framing Character | Full | See “Frame Start Char” and “Frame End Char” on page 8 |

| Command | Command Description | Support | Reference |
|----------------|---------------------------------|----------------|---|
| <%ENT> | Request Framing Character Value | Ignored | See "Ignored Configurations And Information Request Commands" on page 16. |
| <MS...> | Change Separator Character | Full | |

Fonts And Character Set Commands

| Command | Command Description | Support | Reference |
|----------------|--|----------------|---|
| <%N> | Request Number of Fonts Stored | Ignored | See "Ignored Configurations And Information Request Commands" on page 16. |
| <%F> | Request Names and Numbers of Fonts Stored | Ignored | |
| <+TF...> | Select Character Set | Full | |
| <FF...> | Download Font | Ignored | See "Ignored Configurations And Information Request Commands" on page 16. |
| <FL...> | Request List of Downloaded Fonts in RAM Disk | Ignored | See "Ignored Configurations And Information Request Commands" on page 16. |
| <FR...> | Clear Specified Font in Ram Disk (0 for all) | Full | |

Ignored Configurations And Information Request Commands

Ignored configuration commands are used to configure or request IER-520 specific parameters such as sensor threshold voltages. Some of these settings are not available on Printronix printers, or different ranges for the settings are used. Since most of the ignored commands are one time adjustments, use the printer's front panel menus to configure these settings. For commands that initiate features such as printing test pages, select the Print Tests option under the Diagnostics menu. For information request commands, use the Printronix PNE suite. See "Configuration Compatibility" on page 21.

Command Descriptions

Print Area

When looking at the front of the printer, the origin of the label is positioned at the bottom left of the label, and extends up and to the right. The label length for continuous labels can be set in the menu or with the <+DL...> command.

Physical page rotation is not available on IER printers. When rotation is required, each object should be rotated individually. See Figure 1 below for a graphical representation of the print area, and the coordinate system used by the IER language.

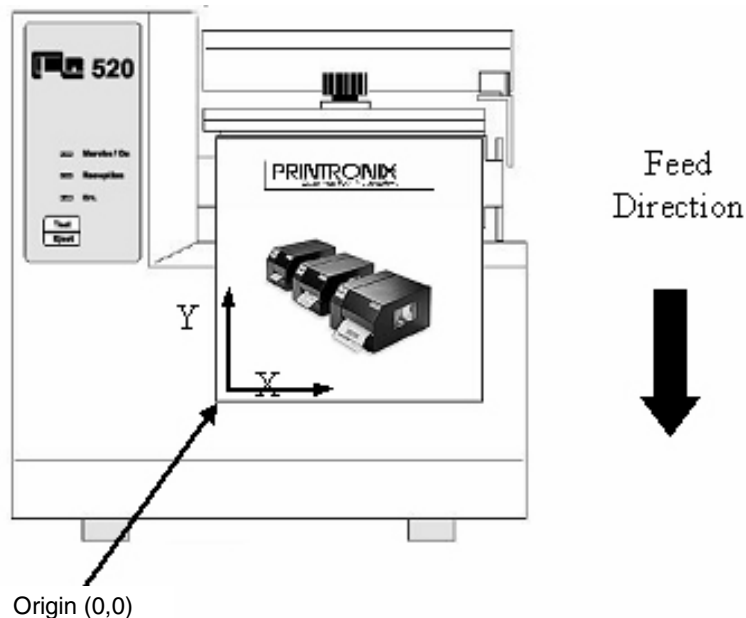


Figure 1. Page Origin and Coordinate System

Unit Selection

By default, positioning of page elements (text, barcodes etc.) is in dots. The unit can be changed to 1/10mm using the <+U...> command. If the 1/10mm unit is selected, positioning is independent of the printhead used.

Text Fields

Text fields are printed using the <T...> or <MT...> commands. These commands require parameters to:

- set the field origin
- select the font number to be used (0 to 3 for resident fonts)
- select the field rotation (four directions, 0, 90, 180 or 270, either left aligned or centered)
- select the color. The color parameter ranges from 0 to 3. Table 1 describes how text will print for each value.

Table 1. Text Colors

| Parameter Value | Description |
|-----------------|---|
| 0 | White text on black background (reverse). |
| 1 | Black text on white background (normal) |
| 2 | Black text on see thru background (OR Mode) |
| 3 | Text inverts the background (XOR Mode) |

Resident Fonts

Table 2 lists the resident fonts for the IER 520 printer. The font size is represented by two numbers: the first is the dot size for the 300 dpi version, and the second is the dot size for the 200 dpi version. IEGL uses Agfa scalable fonts shown in the table to replace the IER fonts. Property tables are used to fine tune the fonts sizes to closely match the IER fonts.

Table 2. Font Replacements

| IER Font ID | Description | Agfa Replacement |
|-------------|---------------------------------|------------------|
| 0 | Bitmap Arial Bold, size 24/16 | 92244 |
| 1 | Bitmap Arial Bold, size 36/24 | 92248 |
| 2 | Bector Arial Bold, size 50/50 | 92248 |
| 3 | Vector arial Bold, size 100/100 | 92248 |

Downloaded Fonts

The IER-520 printer (program version 3.00 or higher) supports downloading of TrueType fonts to font ID locations starting after the resident fonts (4 to 99). The fonts is stored in the Ram Disk. Commands used for downloaded fonts are <FF...> for download, <FL...> to request status (not supported on IEGL), and <FR...> to delete downloaded fonts. The downloaded data is in a proprietary format.

Character Sets

The four character sets available on the IER-520 printer is also supported by the IEGL emulation. Select the sets using the <+TF..> command, or through the Character Set option under the IEGL Setup menu. See Appendix A on page 25 for an overview of characters in each of the sets.

Barcode Fields

All barcodes fields, except PDF417 are printed using the <B...> or <MB...> command. These commands require parameters to:

- set the field origin
- select the barcode type
- select the field rotation (four directions, 0, 90, 180 or 270, either left aligned or centered)
- set the ratio (enlargement factor)
- set readable fields.

Barcode PDF417 is printed using the <PDF...> or <MPDF ...> command. This 2-D barcode type requires other parameters: width and height of the window, number of rows, number of columns, column width, row height, rotation and error correction level.

Barcode Types

Table 3 lists the barcode types supported by IER printers.

Table 3. Barcode Symbologies

| Type ID | Symbology | Compatibility |
|---------|---|---------------|
| 0 | Code 3 of 9 | Full |
| 1 | Interleaved 2 of 5 without checksum calculation | Full |
| 2 | Standard 2 of 5 | Full |
| 3 | EAN-8 | Full |
| 4 | EAN-13 | Full |
| 5 | UPCA | Full |

Table 3. Barcode Symbologies

| Type ID | Symbology | Compatibility |
|--------------------|---|---------------|
| 6 | MONARCH (=Codabar) | Full |
| 7 | Code 128 C without checksum calculation | Full |
| 8 | Code 128 A,B,C without checksum calculation | Full |
| 9 | Automatic Code 128 C without checksum calculation | Full |
| 101 | Same as 1, but with checksum calculation | Full |
| 108 | Same as 8, but with checksum calculation | Full |
| 109 | Same as 9, but with checksum calculation | Full |
| (Separate Command) | PDF417 | Full |

Barcode Positioning

The barcode origin is at the bottom of the leftmost bar as shown in the figure below.



Figure 2. Barcode Reference Coordinates

Logos

Logos can be printed directly on the page bitmap using the <G...> or <GPCX...> command. Or, logos can be downloaded using the <LG...> or <LPCX...> command, and then loaded onto the page bitmap using the <LC...> command. For downloaded logos, IEGL saves the logo in the flash file system to emulate the battery backed-up Ram Disk supported on the IER-520 printer.

Graphics

The following IER-520 graphic functions are supported by the IEGL emulation.

- Lines (using the <L...> command)
- Boxes (using the <C...> command)
- Oblique lines (using the <D...> command)

Cutter Commands

The cutter on IER printers can be activated manually by using the <CM> command, or automatically after each page with the <+CF...> command. Both commands are supported by IEGL. However, since Printronix printers support more media handling options, the <+CF...> command cannot be used to select all options. In such cases, the <+CF...> command can be ignored via the ignore Media Setup menu. The media handling value as selected in the front panel will be used. See “Media Setup Cmd” on page 9.

3

Configuration Compatibility

Since the IER-520 printer does not have a control panel with LCD the printer can only be configured by commands. Table 4 lists the IER-520 configuration commands, a description, and the corresponding Printronix menus that can be used to perform the equivalent configuration. The table also lists commands to request printer information or status. For those commands, equivalents available in the Printronix printer menu and equivalent functions in the PNE suite are listed.

Table 4. Font Replacement

| IER-520 Command | Description | PTX Setting |
|------------------------|---|---|
| <A...> | Print Test Pages | SL4M/T4M: DIAGNOSTICS -> Printer Tests SL5000r/T5000r: DIAGNOSTICS -> Printer Tests |
| <+CBR...> | Configure Memory Space | SL4M/T4M: PRINTER SETUP -> Max Font Buffer, Max Cache Memory, Max Cached Char. SL5000r/T5000r: PRINTER CONTROL -> Glob Mem Adjust, Max Font Buffer, Max Cache Memory, Max Cached Char. |
| <+CF...> | Configure Media Handling Option | SL4M/T4M: MEDIA SETUP -> Media Handling SL5000r/T5000r: MEDIA CONTROL -> Media Handling |
| <+D...> | Selects the top of form (TOF) sensing method for the media. Gap, Mark, etc. | SL4M/T4M: SENSOR SETUP -> Gap/Mark Sensor SL5000r/T5000r: CALIBRATE CONTROL -> Gap/Mark Sensor |
| <FL...> | Request list of downloaded fonts in RAM Disk | SL4M/T4M: PRINTER SETUP -> Print File List SL5000r/T5000r: PRINTER CONTROL -> Print File List PNE: Flash File Manager |

Table 4. Font Replacement

| IER-520 Command | Description | PTX Setting |
|-----------------|--|---|
| <LA...> | Language Selection for Config Print | SL4M/T4M: PRINTER SETUP -> Display Language SL5000r/T5000r: PRINTER CONTROL -> Display Language PNE: Configuration Editor |
| <LM> | Request Available Memory Space | SL4M/T4M: PRINTER SETUP -> Print File List SL5000r/T5000r: PRINTER CONTROL -> Print File List |
| <INL> | Query Print Counter | SL4M/T4M: CONFIGURATION -> Print Config. SL5000r/T5000r: CONFIG. CONTROL -> Print Config. PNE: Information Capture, Configuration Editor |
| <+OP...> | Vertical Image Shift | SL4M/T4M: MEDIA SETUP -> Vertical Image Shift SL5000r/T5000r: MEDIA SETUP -> Vertical Image Shift |
| <+OX...> | Horizontal Image Shift | SL4M/T4M: MEDIA SETUP -> Horizontal Image Shift SL5000r/T5000r: MEDIA CONTROL -> Horizontal Image Shift |
| <+TT...> | Select Print Technology, DIRECT THERMAL, *THERMAL TRANSFER | SL4M/T4M: MEDIA SETUP -> Print Mode SL5000r/T5000r: MEDIA CONTROL -> Print Mode |
| <IV...> | Request Configuration | SL4M/T4M: CONFIGURATION -> Print Config. SL5000r/T5000r: CONFIG. CONTROL -> Print Config. PNE: Information Capture, Configuration Editor |
| <V> | Request Program Version Number | SL4M/T4M: DIAGNOSTICS -> Software Build SL5000r/T5000r: DIAGNOSTICS -> Software Build |

Error Reporting

IEGL will not report errors through the host interface as supported on the IER520 printer. Instead, IEGL will use the error reporting option as supported on the other IGP emulation. If the menu is set to "Print", the label will print with the best possible quality, followed by a page which lists the errors. If the menu is set to "Debug", the label will print with the best possible quality, and the errors will be sent through the printer debug port.

Templates

The IER-520 printer supports templates, referenced by number or by name. On the IER printers, templates are stored in the battery backed up memory.

In IEGL, by default, the templates are stored in flash memory. However, for specific applications that send templates repeatedly, templates can also be saved to RAM. See “Templ. Location” and “Save Templates” on page 8 for details.

The ID number ranges from 0 to 100, and the maximum length for the name is 16 characters. The template contents are saved to a flash file with the following format:

ierxxx_n...n.tpl

where xxx is a fixed three digit template number as supplied in the start template create command <MI...>. For instance, if the number supplied is three, then the filename will display as 003. “n...n” is the name of the template. The maximum length is 16 characters. If the supplied number is 12, and the name is MyTemplate, the file stored by IEGL is named:

ier012_MyTemplate.tpl

The file is saved after receiving the end template created command <MF>. The printer LCD shows the template number being saved and the free flash memory remaining.

Constraints

Non-Volatile Page Memory

In the IER-520 printer, the page bitmap is saved in the battery backed up memory. The content of this memory is preserved when the printer is turned off, and the page can be recalled after the printer is turned on again. The SL4M/T4M and SL5000R/T5000R printers do not support battery backed up memory. Since saving to flash is slow and the number of times flash can be written to is limited, IEGL does not support page memory preservation when the power is turned off.

Load Template at Power Up

The IER-520 printer supports automatic loading of a template at power-up. The name or number of the template to be loaded can be set by using the <MA...> command. IEGL does not support this feature.

Changing Frame Start and End Characters

When the frame start and end characters are changed on the IER-520 printer, the changes are automatically saved in battery backed-up RAM. Since SL5000r/T5000r printers do not support battery backed-up RAM, these settings are saved with the configuration. See “Frame Start Char” and “Frame End Char” on page 8 for details.

A

Character Sets

PC850 Character Set

| Decimal | 0 | 16 | 32 | 48 | 64 | 80 | 96 | 112 | 128 | 144 | 160 | 176 | 192 | 208 | 224 | 240 |
|---------|---|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Hexa | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B | C | D | E | F |
| 0 | 0 | | | 0 | @ | P | ` | p | Ç | É | á | | ¸ | ð | Ó | - |
| 1 | 1 | | ! | 1 | A | Q | a | q | ü | æ | í | | ¸ | Ð | ß | ± |
| 2 | 2 | | " | 2 | B | R | b | r | é | Æ | ó | | ¸ | È | Ò | — |
| 3 | 3 | | # | 3 | C | S | c | s | â | ô | ú | | | Ë | Ï | ¾ |
| 4 | 4 | | \$ | 4 | D | T | d | t | ä | ö | ñ | | — | È | ö | ¶ |
| 5 | 5 | | % | 5 | E | U | e | u | à | ò | Ñ | Á | + | ı | Ö | § |
| 6 | 6 | | & | 6 | F | V | f | v | â | û | ª | Â | ã | í | µ | + |
| 7 | 7 | | ' | 7 | G | W | g | w | ç | ù | º | À | Ã | î | þ | ~ |
| 8 | 8 | | (| 8 | H | X | h | x | ê | ÿ | ¸ | © | ¸ | ï | þ | ° |
| 9 | 9 | |) | 9 | I | Y | i | y | ë | Û | ® | ¸ | ¸ | ¸ | Ú | ¨ |
| 10 | A | | * | : | J | Z | j | z | è | Ü | ¸ | | ± | ¸ | Û | • |
| 11 | B | | + | ; | K | [| k | { | ï | ø | ½ | ¸ | ¸ | ■ | Ü | ¹ |
| 12 | C | | , | < | L | \ | l | | î | £ | ¼ | ¸ | ¸ | ■ | Ý | ³ |
| 13 | D | | - | = | M |] | m | } | i | ø | ı | Ç | = | | Ý | ² |
| 14 | E | | . | > | N | ^ | n | ~ | Ä | x | « | ¥ | ¸ | ı | — | ■ |
| 15 | F | | / | ? | O | _ | o | | Å | f | » | ¸ | € | ■ | ' | |

Apple Character Set

| Decimal | 0 | 16 | 32 | 48 | 64 | 80 | 96 | 112 | 128 | 144 | 160 | 176 | 192 | 208 | 224 | 240 |
|---------|---|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Hexa | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B | C | D | E | F |
| 0 | 0 | | | 0 | @ | P | ` | p | Ä | ê | | | ¿ | | | |
| 1 | 1 | | ! | 1 | A | Q | a | q | Å | ë | ° | ± | ı | | . | Ò |
| 2 | 2 | | " | 2 | B | R | b | r | Ç | í | ç | | ¬ | | , | Û |
| 3 | 3 | | # | 3 | C | S | c | s | É | ı | £ | | | | | Ü |
| 4 | 4 | | \$ | 4 | D | T | d | t | Ñ | î | § | ¥ | f | | | Ù |
| 5 | 5 | | % | 5 | E | U | e | u | Ö | ï | • | µ | | | | Ä |
| 6 | 6 | | & | 6 | F | V | f | v | Ü | ñ | ¶ | | | + | Ê | |
| 7 | 7 | | ' | 7 | G | W | g | w | á | ó | ß | | « | | Á | |
| 8 | 8 | | (| 8 | H | X | h | x | à | ò | ® | | » | ÿ | Ë | |
| 9 | 9 | |) | 9 | I | Y | i | y | â | ô | © | | | | Ë | |
| 10 | A | | * | : | J | Z | j | z | ä | ö | | | | / | Í | |
| 11 | B | | + | ; | K | [| k | | å | õ | · | ª | À | € | Î | |
| 12 | C | | , | < | L | \ | l | | á | ú | ¨ | º | Ã | | Ï | |
| 13 | D | | - | = | M |] | m | | ç | ù | | | Ö | | İ | |
| 14 | E | | . | > | N | ^ | n | | é | û | Æ | æ | | | Ó | |
| 15 | F | | / | ? | O | _ | o | | è | ü | Ø | ø | | | Ô | |

Latin 1 Character Set

| Decimal | 0 | 16 | 32 | 48 | 64 | 80 | 96 | 112 | 128 | 144 | 160 | 176 | 192 | 208 | 224 | 240 |
|---------|---|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Hexa | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B | C | D | E | F |
| 0 | 0 | | | 0 | @ | P | ` | p | | | | ° | À | Ð | à | ð |
| 1 | 1 | | ! | 1 | A | Q | a | q | | | ı | ± | Á | Ñ | á | ñ |
| 2 | 2 | | " | 2 | B | R | b | r | | | ç | ² | Â | Ò | â | ò |
| 3 | 3 | | # | 3 | C | S | c | s | | | £ | ³ | Ã | Ó | ã | ó |
| 4 | 4 | | \$ | 4 | D | T | d | t | | | € | ´ | Ä | Ö | ä | ö |
| 5 | 5 | | % | 5 | E | U | e | u | | | ¥ | µ | Å | Õ | å | õ |
| 6 | 6 | | & | 6 | F | V | f | v | | | | ¶ | Æ | Ö | æ | ö |
| 7 | 7 | | ' | 7 | G | W | g | w | | | § | · | Ç | × | ç | + |
| 8 | 8 | | (| 8 | H | X | h | x | | | ¨ | ¸ | È | Ø | è | ø |
| 9 | 9 | |) | 9 | I | Y | i | y | | | © | ¹ | É | Ù | é | ù |
| 10 | A | | * | : | J | Z | j | z | | | ª | º | Ê | Ú | ê | ú |
| 11 | B | | + | ; | K | [| k | { | | | « | » | Ë | Û | ë | û |
| 12 | C | | , | < | L | \ | l | | | | ¬ | ¼ | Ì | Ü | ì | ü |
| 13 | D | | - | = | M |] | m | } | | | - | ½ | Í | Ý | í | ý |
| 14 | E | | . | > | N | ^ | n | ~ | | | ® | ¾ | Î | Þ | î | þ |
| 15 | F | | / | ? | O | _ | o | | | | ¯ | ¿ | Ï | ß | ï | ÿ |

Roman 8 Character Set

| Decimal | 0 | 16 | 32 | 48 | 64 | 80 | 96 | 112 | 128 | 144 | 160 | 176 | 192 | 208 | 224 | 240 |
|---------|---|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Hexa | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B | C | D | E | F |
| 0 | 0 | | | 0 | @ | P | ` | p | | | | — | à | À | Á | Ð |
| 1 | 1 | | ! | 1 | A | Q | a | q | | | À | Ý | è | î | Ā | þ |
| 2 | 2 | | " | 2 | B | R | b | r | | | Â | ý | ô | ∅ | ā | • |
| 3 | 3 | | # | 3 | C | S | c | s | | | È | ° | û | Æ | Ð | μ |
| 4 | 4 | | \$ | 4 | D | T | d | t | | | Ê | Ç | á | â | ð | ¶ |
| 5 | 5 | | % | 5 | E | U | e | u | | | Ë | ç | é | í | ï | ¾ |
| 6 | 6 | | & | 6 | F | V | f | v | | | Ï | Ñ | ó | ø | ì | — |
| 7 | 7 | | ' | 7 | G | W | g | w | | | Ī | ñ | ú | æ | Ó | ¼ |
| 8 | 8 | | (| 8 | H | X | h | x | | | ’ | ı | à | Ä | Ò | ½ |
| 9 | 9 | |) | 9 | I | Y | i | y | | | ˘ | ı | è | ı | Õ | ª |
| 10 | A | | * | : | J | Z | j | z | | | ^ | € | ò | Ö | ö | ° |
| 11 | B | | + | ; | K | [| k | { | | | ** | £ | ù | Ü | S | « |
| 12 | C | | , | < | L | \ | l | | | | ~ | ¥ | ä | É | s | ■ |
| 13 | D | | - | = | M |] | m | } | | | Ù | § | ë | İ | Ú | » |
| 14 | E | | . | > | N | ^ | n | ~ | | | Û | f | ö | ß | Ÿ | ± |
| 15 | F | | / | ? | O | _ | o | | | | £ | ç | ü | Ô | ÿ | |

B

Contact Information

Printronix Customer Support Center

IMPORTANT Please have the following information available prior to calling the Printronix Customer Support Center:

- Model number
- Serial number (located on the back of the printer)
- Installed options (i.e., interface and host type if applicable to the problem)
- Configuration printout:

Thermal Printer

See "Printing A Configuration" in the *Quick Setup Guide*.

Line Matrix Printer

Press PRT CONFIG on the control panel, then press Enter.

- Is the problem with a new install or an existing printer?
- Description of the problem (be specific)
- Good and bad samples that clearly show the problem (faxing of these samples may be required)

Americas (714) 368-2686

Europe, Middle East, and Africa (31) 24 6489 410

Asia Pacific (65) 6548 4114

China (86) 800-999-6836

<http://www.printronix.com/support.aspx>

Printronix Supplies Department

Contact the Printronix Supplies Department for genuine Printronix supplies.

Americas (800) 733-1900

Europe, Middle East, and Africa 33 (0) 1 46 25 19 07

Asia Pacific (65) 6548 4116
or (65) 6548 4182

China (86) 400-886-5598

<http://www.printronix.com/supplies-parts.aspx>

Corporate Offices

Printronix, Inc.
14600 Myford Road
P.O. Box 19559
Irvine, CA 92623-9559
Phone: (714) 368-2300
Fax: (714) 368-2600

Printronix, Inc.
Nederland BV
P.O. Box 163, Nieuweweg 283
NL-6600 Ad Wijchen
The Netherlands
Phone: (31) 24 6489489
Fax: (31) 24 6489499

Printronix Schweiz GmbH
42 Changi South Street 1
Changi South Industrial Estate
Singapore 486763
Phone: (65) 6542 0110
Fax: (65) 6546 1588

Printronix Commercial (Shanghai) Co. Ltd
22F, Eton Building East
No.555, Pudong Av.
Shanghai City, 200120, P R China
Phone: (86) 400 886 5598
Fax: (86-21) 5138 0564

Visit the Printronix web site at www.primtronix.com



254078-001C